

TP05/TP08

Instruction Sheet 安裝說明 安裝說明

2014-04-30



Text Panels

文本顯示器系列

文本显示器系列

文本显示器系列

5011677104-5G05

Model	TP05G (BS2/BT2)	TP08G (BS2/BT2)
Screen Type / Display Color	STN-LCD / Monochromatic	
Case Color	BS2: White color, BT2: Black color	
Backlight	The back-light automatic turn off time is 1~99 minutes (0 = do not turn off) (The back-light life is about 50 thousand hours at 25°C)	
Resolution	160×80 dots	240×128 dots
Display Range	83mm(W)×41mm(H); 3.8" (diagonal preferred)	78mm(W)×41mm(H); 3.8" (diagonal preferred)
Contrast Adjustment	10 levels of adjustment	
Language/Font	ASCII: (Code page 850) Alphanumeric (including European characters) Taiwan: (Big 5 codes) Traditional Chinese Fonts China: (GB2324-80 codes) Simplified Chinese Fonts	

Specifications	TP05G (BS2/BT2)	TP08G (BS2/BT2)
Display Text	5 × 8 dots 8 × 8 dots 8 × 12 dots 8 × 16 dots	32 characters × 10 rows 20 characters × 10 rows 20 characters × 6 rows 20 characters × 5 rows
Font Size	ASCII: 5×8, 8×8, 8×12, 8×16	48 characters × 16 rows 30 characters × 16 rows 30 characters × 10 rows 30 characters × 8 rows
Alarm LED Indicator (RED)	1. Power on indication (Blink for three times) 2. Communication error alarm 3. Special indication by user programming	
Program Memory	1024KB flash memory	
Serial Communication Port RS-232(COM1)	Unsynchronized transmission method: RS-232 Data length: 7 or 8 bits, Stop bits: 1 or 2 bits Parity: None/Odd/Even, Transmission speed: 9,600bps~115,200bps	
Extension Communication Port RS-422(COM1) RS-485(COM2)	Unsynchronized transmission method: RS-485 / RS-422 Data length: 7 or 8 bits, Stop bits: 1 or 2 bits Parity: None/Odd/Even, Transmission speed: 9,600bps~115,200bps	
Battery Cover	RS-422: 9 PIN D-SUB male, RS-485: 6-Pin removal terminal	
Extension Interface	DC 3V battery for HMI	
6-Pin Removal Terminal	1. Update firmware version 2. The slot for program copy card	
	Include DC 24V input and RS-485 communication input	

6-Pin Removal Terminal

DC 24V input and RS-485 communication input

1. Update firmware version
2. The slot for program copy card

Include DC 24V input and RS-485 communication input

6-Pin Removal Terminal

3 Electrical Specifications

Model	TP05G (BS2/BT2)	TP08G (BS2/BT2)
Display	Monochromatic STN LCD	
Effective Display Area	83mm(W)×41mm(H); 3.8" (diagonal preferred)	78mm(W)×41mm(H); 3.8" (diagonal preferred)
Display Resolution	160×80 5×8 dots 32 characters × 10 rows 8×8 dots 20 characters × 10 rows 8×12 dots 20 characters × 6 rows 8×16 dots 10 characters × 5 rows	240×128 5×8 dots 48 characters × 16 rows 8×8 dots 30 characters × 16 rows 8×12 dots 30 characters × 10 rows 8×16 dots 30 characters × 10 rows
LCD Contrast Adjustment	Set by Software, adjust the contrast by the press button in the function table	
LCD Backlight Type	LED Backlight: Automatic Turn-off Setting	
Function / Numeric Keys	0~9,F1~F5, ESC, ±, CLR, ←, →, SHIFT, ENTER and Arrow Keys (UP, DOWN)	
External Input Power	24V (1.8W Max.)	
Memory Capacity	1024K Byte	
CPU	ST STR710RZT6	
RAM of System	64K Byte	
Communication Interface	COM1: RS-232/RS-422 COM2: RS-485	
Waterproof Class of Front Panel	IP66 / NEMA4 / UL Type4 indoor	
Operating Temperature for Hardware	0~50°C; 20~90% RH (non-condensing)	
Storage Temperature for Hardware	-20~60°C	
Vibration	5Hz≤f<9Hz = Continuous: 1.75mm / Occasional: 3.5mm 9Hz≤f≤150Hz = Continuous: 0.5g / Occasional: 1.0g	
Shock	15g peak, 11ms duration, half-sine, three shocks in each direction per axis, on 3 mutually perpendicular axes (total of 18 shocks)	
Radiated Emission	CISPR11, Class A	
Electrostatic Discharge Immunity	EN61000-4-2	
Radiated Immunity	EN61000-4-3	
Electrical Fast Transient	EN61000-4-4	
Weight / Dimensions	0.43kg; 210×122×45mm (Width(W) × Height(H) × Deep(D))	
Cooling Method	Natural Air Cooling	



Warning

EN TP05/TP08 is an OPEN-TYPE device. It should be installed in a control cabinet free of airborne dust, humidity, electric shock and vibration. To prevent non-maintenance staff from operating TP05/TP08, or to prevent an accident from damaging TP05/TP08, the control cabinet in which TP05/TP08 is installed should be equipped with a safeguard. For example, the control cabinet in which TP05/TP08 is installed can be unlocked with a special tool or key.

EN DO NOT connect AC power to any of I/O terminals, otherwise serious damage may occur. Please check all wiring again before TP05/TP08 is powered up. After TP05/TP08 is disconnected, Do NOT touch any terminals in a minute. Make sure that the ground terminal ⊕ on TP05/TP08 is correctly grounded in order to prevent electromagnetic interference.

FR TP05/TP08 est un module OUVERT. Il doit être installé dans une enceinte protectrice (boîtier, armoire, etc.) saine, dépourvue de poussière, d'humidité, de vibrations et hors d'atteinte des chocs électriques. La protection doit éviter que les personnes non habilitées à la maintenance puissent accéder à l'appareil (par exemple, une clé ou un outil doivent être nécessaire pour ouvrir la protection).


FR Ne pas appliquer la tension secteur sur les bornes d'entrées/Sorties, ou l'appareil TP05/TP08 pourra être endommagé. Merci de vérifier encore une fois le câblage avant la mise sous tension du TP05/TP08. Lors de la déconnection de l'appareil, ne pas toucher les connecteurs dans la minute suivante. Vérifier que la terre est bien reliée au connecteur de terre ⊕ afin d'éviter toute interférence électromagnétique.

1 Introduction

■ Explanation & Peripherals

You can choose Delta TP Series. TP05G (BS2/BT2) has the features of high resolution 160×80 dots. When the font is Traditional Chinese character and the font size is 8, TP05G (BS2/BT2) is able to display 14×7 Chinese character; TP08G (BS2/BT2) has the features of high resolution 240×128 dots. When the font is Traditional Chinese character and the font size is 8, TP08G (BS2/BT2) is able to display 21×11 Chinese character. Both of them provide multilingual display and two built-in communication ports, one is for RS-232 and the other is for RS-485/RS-422, RS-232 and RS-485 can be used simultaneously. Besides, they also support built-in RTC, communication/alarm indication LED, etc. functions. Besides, the users can purchase program copy card (optional) to copy settings and programs quickly and save download time. Regarding the editing software, there are various objects and images for various users' requirements. Please ensure to use TP series with Delta power supply module, DVPPS01 and DVPPS02.

■ Product Outline

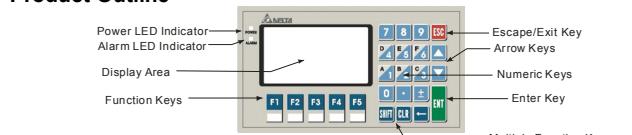


2 Function Specifications

Model	TP05G (BS2/BT2)	TP08G (BS2/BT2)
Screen Type / Display Color	STN-LCD / Monochromatic	
Case Color	BS2: White color, BT2: Black color	
Backlight	The back-light automatic turn off time is 1~99 minutes (0 = do not turn off) (The back-light life is about 50 thousand hours at 25°C)	
Resolution	160×80 dots	240×128 dots
Display Range	83mm(W)×41mm(H); 3.8" (diagonal preferred)	78mm(W)×41mm(H); 3.8" (diagonal preferred)
Contrast Adjustment	10 levels of adjustment	
Language/Font	ASCII: (Code page 850) Alphanumeric (including European characters) Taiwan: (Big 5 codes) Traditional Chinese Fonts China: (GB2324-80 codes) Simplified Chinese Fonts	


4 Dimension and Installation

■ Product Outlook and Dimensions (Units: mm, []: inch)

Back Panel

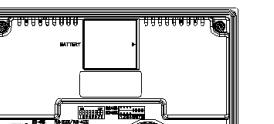


Front Panel and Right Side Diagram

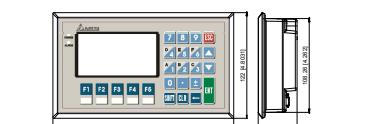


6-Pin Terminals:

Wire Gauge: 12-24 AWG / Torque: 4.5 lb.-inch

Mounting Dimensions (Panel Cutout)

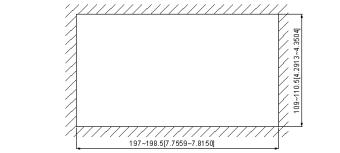

Vertical View

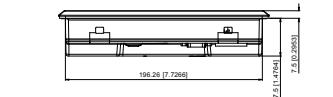

5 Password Function

If the users forgot the password, the password can be cleared by using the following code: 8888. This universal code will clear the password and all TP05G/TP08G internal programs. The TP05G/TP08G will be reset to the factory settings. Please pay close attention when using it. The password can be the alphabet from A to Z or the number from 0 to 9. But it must use the function keys F0~F5 to input the password characters. Please refer to the following table.

Function Key	Use Method	Function Key	Use Method
Numeric Key 0 ~ 9	J→K→L→M→N→O→P→Q→R	F3	Scrolls in a loop as follows
F1	This key is left direction key and it can be used to select the position of the value.	F4	Scrolls in a loop as follows S→T→U→V→W→X→Y→Z
F2	Scrolls in a loop as follows A→B→C→D→E→F→G→H→I	F5	It can be a right direction key in the system menu.

6 Hardware Operation

When the users want to startup TP05G/TP08G, a 24VDC power is needed. After applying 24VDC power to TP05G/TP08G, it will enter into the startup display and then enter the user-designed program. Pressing Esc key and holding on for 5 seconds can return to system menu. There are five selections in the system menu and are described below.

SELECTIONS	EXPLANATION
Download Program	Use the connection cable (DVPCAB530) to connect the TP05G/TP08G serial communication port RS-232 to a PC. Then use the TPEditor software to download an application program to TP05G/TP08G.
Upload Program	Use the connection cable (DVPCAB530) to connect the TP05G/TP08G serial communication port RS-232 to a PC. Then use the TPEditor software to upload an application program from TP05G/TP08G.
Copy Program	Transfer a program between two TP05G/TP08G units. 1: Transmit Program ; 2: Receive Program When transmit programs and data between two TP05G/TP08G units. Set one TP05G/TP08G to "Receive Program" mode and the other TP05G/TP08G to "Transmit Program" mode. Please use twisted pair wires to connect the two units via the RS-485 ports.
TP05G/TP08G Settings	There are 8 items that used to modify TP05G/TP08G system settings: 1. Communication protocol: Setting the address of TP05G/TP08G, and the communication string for either RS-232 or RS-485. 2. Contrast: Adjust the contrast of LCM display screen. 3. Back-light: adjust the automatic turn off time of LCM. Setting range is 00~99 seconds. If set to 00, the LCM Back-light will not turn off. 4. Date and Time: It is used to set the TP05G/TP08G built-in RTC including year, month, day, hour, minute, second and week. Also the internal battery capacity display is shown here. 5. Beep: Used to set the buzzer sound, normal mode or quiet mode. 6. Language Setting: Used to set the displayed language. English, Traditional Chinese, Simplified Chinese or user-defined language. 7. Password setting: Used to set, enable, and disable the password function. If the password function is enabled, it will require the user to input a password before entering any system menu. The factory password is 1234. 8. Startup Display: Used to select the TP05G/TP08G startup display. User can select "user defined" to use the file that designed by TPEditor software and download to TP05G/TP08G.
PLC Connection	There are three methods to connect to PLC: 1. Using TP05G/TP08G serial communication port (COM1) RS-232: set 8-pin DIP switch to RS-485 mode and connect the cable (DVPCAB215 or DVPCAB230) to program communication I/O RS-232C of PLC. 2. Using extension communication port (COM2): set 8-pin DIP switch to RS-485 mode and connect 5-pin removal terminal of extension communication port to RS-485 of PLC with twisted pair. 3. Using extension communication port (COM1): set 8-pin DIP switch to RS-422 mode and connect four pins (6, 7, 8, 9) of 9 PIN D-SUB male to RS-422 of PLC with 4-wire cable.
Execution	Execute the internal program that download from TPEditor software or transmitted from other TP05G/TP08G units. When program is in execution, the user can return to system menu by pressing Escape/Exit (Esc) key for 5 seconds.

7 Communication Connection

