
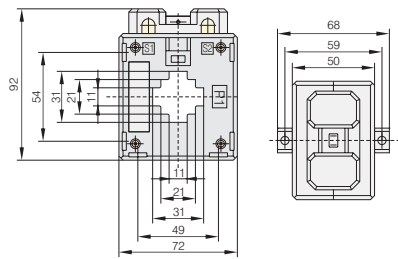

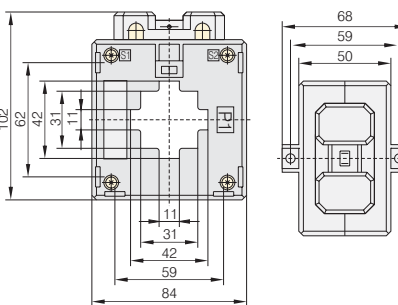

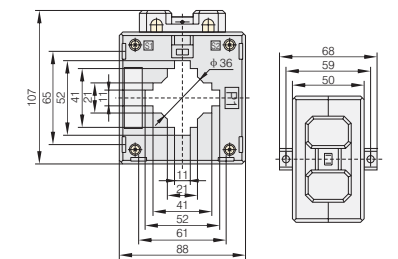

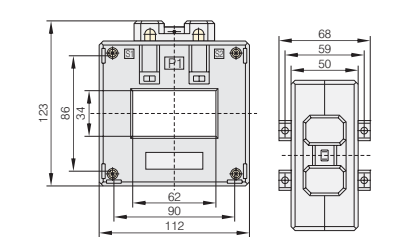

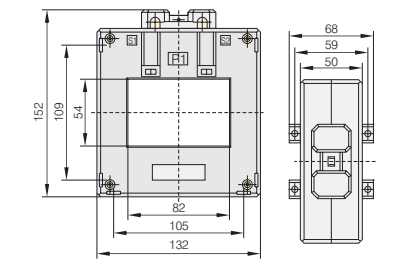



Model	Transformation ratio(I _p n/I _s n) (A)	Rated output(VA)				Number of turns through iron core	Overall and installing dimensions (mm)
		Accuracy class					
		1	0.5	0.5S	0.2		
 BH-0.66 30 III	150/5	10	5	5	5	1	
	200/5	10	5	5	5	1	
	250/5	10	5	5	5	1	
	300/5	10	10	5	5	1	
	400/5	10	10	5	5	1	
	500/5	10	10	10	10	1	
 BH-0.66 40 III	150/5	10	5			1	
	200/5	10	5			1	
	250/5	10	5			1	
	300/5	10	10	5	5	1	
	400/5	10	10	5	5	1	
	500/5	10	10	10	10	1	
	600/5	10	10	10	10	1	
	750/5	10	10	10	10	1	
800/5	10	10	10	10	1		
1000/5	10	10	10	10	1		
 BH-0.66 50 III	300/5	10	10			1	
	400/5	10	10			1	
	500/5	10	10	10	10	1	
	600/5	10	10	10	10	1	
	750/5	10	10	10	10	1	
	800/5	10	10	10	10	1	
	1000/5	10	10	10	10	1	
1200/5	20	20	20	20	1		
 BH-0.66 60 III	500/5	10	10	10	10	1	
	600/5	10	10	10	10	1	
	750/5	10	10	10	10	1	
	800/5	10	10	10	10	1	
	1000/5	10	10	10	10	1	
	1200/5	20	20	20	20	1	
1500/5	20	20	20	20	1		
 BH-0.66 80 III	500/5	10	10	10	10	1	
	600/5	10	10	10	10	1	
	750/5	10	10	10	10	1	
	800/5	10	10	10	10	1	
	1000/5	10	10	10	10	1	
	1200/5	20	20	20	20	1	
	1500/5	20	20	20	20	1	
	2000/5	40	40	40	40	1	
2500/5	40	40	40	40	1		




6. Installation

The fig below illustrates how the current transformer BH is mounted

Fixing through busbar

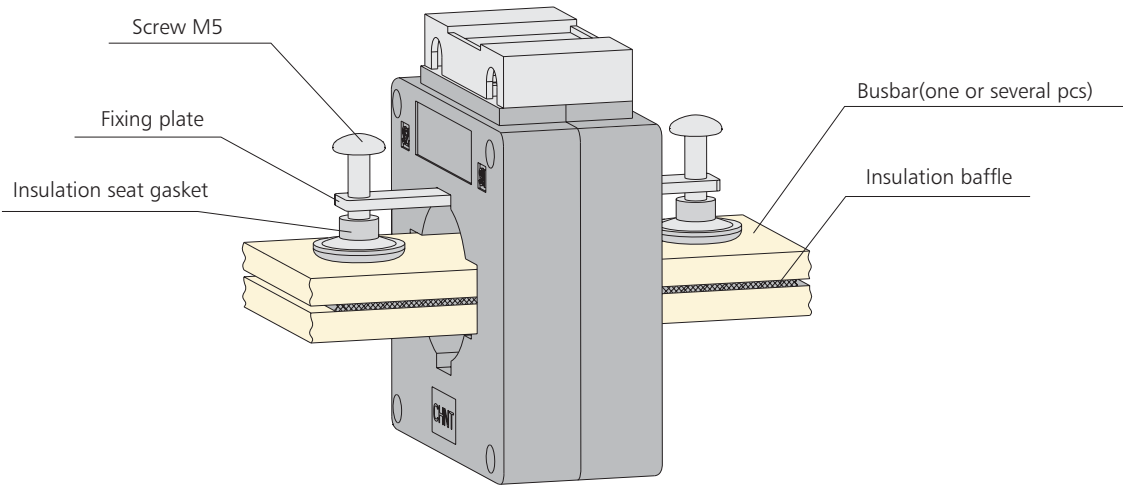


Base mounting

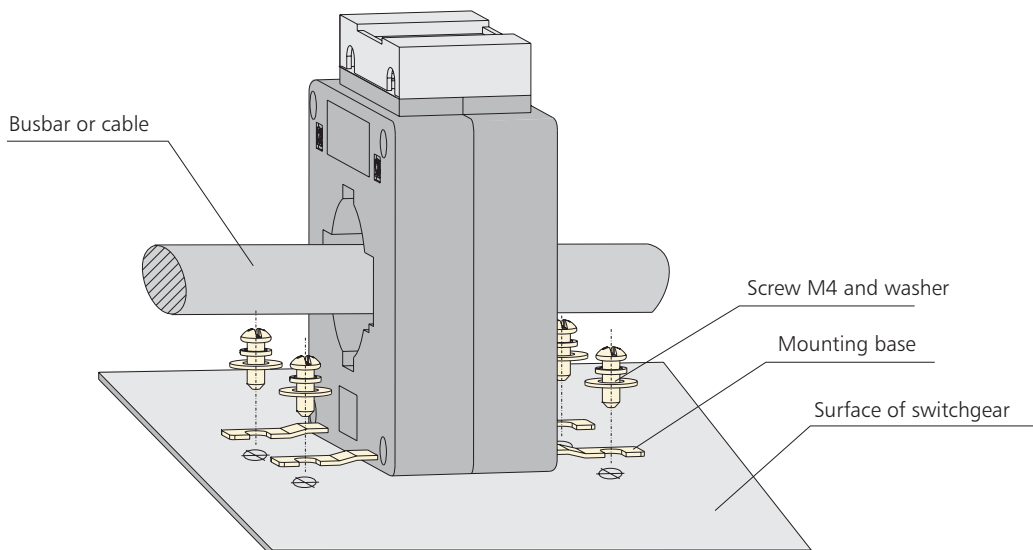

The fig below illustrates how the current transformer BH-0.66 is mounted

Fixing through busbar

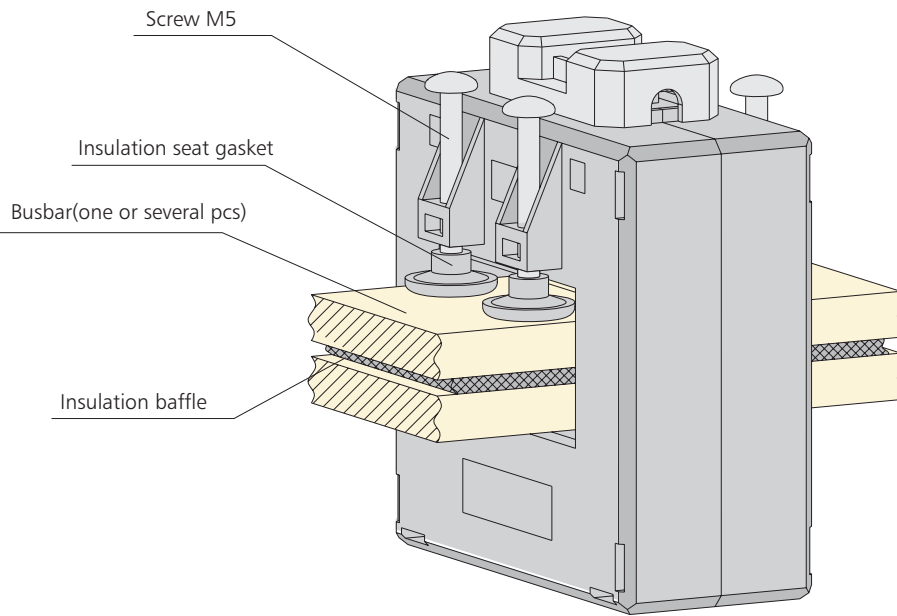

Base mounting

